



Blow

Blow alcohol

Better drinking culture for you

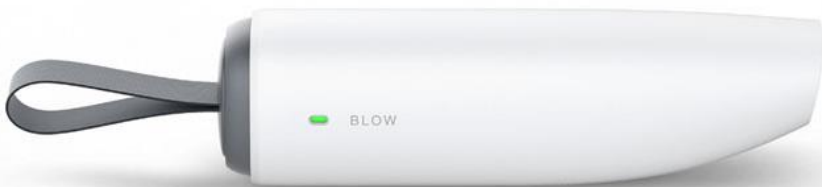

WARNING

- ⚠ Do not measure immediately after drinking. An inaccurate concentration of alcohol in the mouth will be measured, not in the blood.
- ⚠ The device must be kept in a well-ventilated place after use.
- ⚠ If the concentration of high alcohol is re-measured continuously, it may affect the accuracy of the measurement result.
- ⚠ If the surrounding environment is contaminated, stabilization for measurement may not be accurate.
- ⚠ Alcohol sensors are vulnerable to silicone / rubber / volatile materials, so please be careful.
- ⚠ At the time of measurement, please be careful not to let any matter (saliva or other substances) enter the sensor part from the mouth of the tester.
- ⚠ In general, alcohol concentrations are highest between 30 minutes and 1 hour after drinking, and this time may change depending on the food eaten. Therefore, please note that the blood alcohol level may change over time.
- ⚠ This product has been precisely adjusted during manufacture, but it may not work properly if it got shocked or wet during use.
- ⚠ If this product is modified or changed arbitrarily, it may cause malfunction.
- ⚠ Drunk driving might cost disaster, so do not check whether you can or cannot drive based on the measurement results of this product after drinking.
- ⚠ Use this product for reference only to your blood alcohol level and do not try to drive based on the measurement results of this product.
- ⚠ The head office informs the driver that he is solely responsible for any accidents caused by drunk driving, and the manufacturer, distributor and supplier are not responsible for any accidents.

1. Product Overview



2. Activation & Use

2.1. Download the app and sign up




- Download the Blow app from by the QR code or from your phone's app store or Google Play.
- After downloading the Blow app, go through the login process.

2.2. Turn on the power and connect to Bluetooth


- Press the power button next to the device's strap.
- After login is completed, by turning on the power, the mobile phone and the device will automatically connect via Bluetooth.

2.3. Measuring

- The mouth of the device will wound by hand.
- Inhale as deeply as possible and stop for about 3 seconds.
- Then, breathe out (blow) as longer as you can.
- Lastly, measurement data can be checked through the blow app.

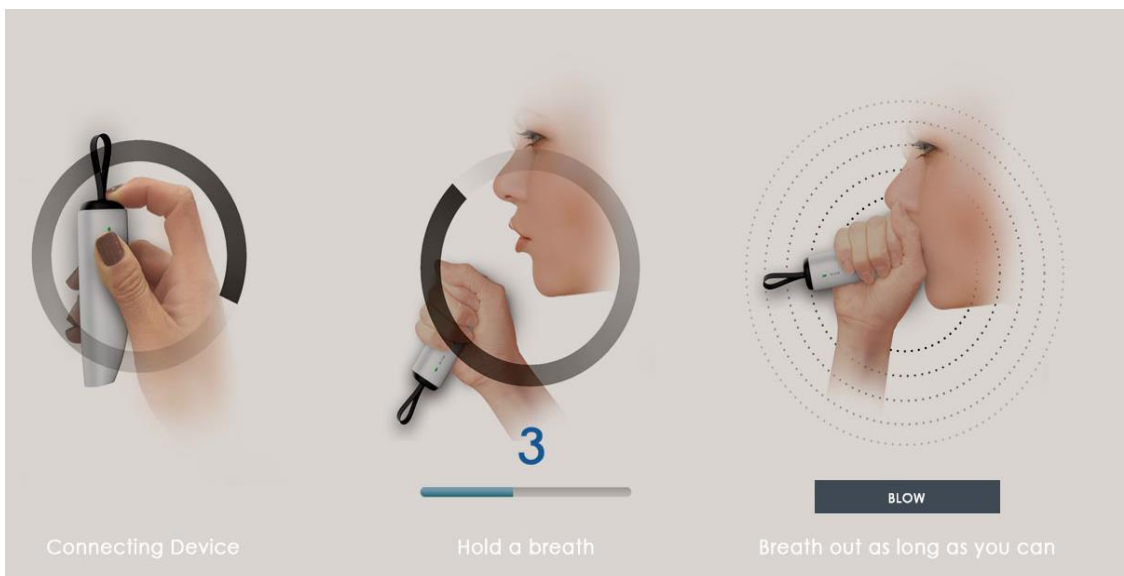

3. Specification

Display	Measuring range	0.000~0.250% BAC
	Accuracy	±10% Based on standard wet alcohol (0.030% BAC)
	Sensor	Electrochemical
Power	Button	1 button (On/Off)
	Battery	Rechargeable Lithium polymer (100mAh)
	Battery life	In continuous use, 100 tests
	Charge time	1 hour (built-in protection circuit)
	Charger	DC5.0/1A (USB Type-C)
Measuring	Initial re-measure time	Within 1 minute
	Expiration time	3 seconds
	Exhalation time	Within 10 seconds based on 10% BAC
	Re-measurement time	Within 10 seconds (Pass/Fail)
Connection		BLE 4.1 (Bluetooth Low Energy)
Temperature		0°C ~ 36°C (32°F ~ 96.8°F)
Dimension		95 x 29 x 27 mm (3.74 x 1.14 x 1.06 inch)
Weight		50g
Approval		

Limited Warranty

SENKO warrants this product to be free of defects in workmanship and materials-under normal use and service for 6 months from the date of purchase from the manufacturer or from the product's authorized reseller.

The manufacturer is not liable (under this warranty) if its testing and examination disclose that the alleged defect in the product does not exist or was caused by the purchaser's (or any third party's) misuse, neglect, or improper installation, testing, or calibrations. Any unauthorized attempt to repair or modify the product, or any other cause of damage beyond the range of the intended use, including damage by fire, lightening, water damage or other hazard, voids liability of the manufacturer.

In the event that a product should fail to perform up to manufacturer specifications during the applicable warranty period, please contact the product's authorized reseller or SENKO service center at 82-31-492-0445 to repair/return information.



73, Oesammi-ro 15 beon-gil, Osan-si, Gyeonggi-do, 18111, South Korea

Tel : 82-31-492-0445
Email : sales@senko.co.kr

Fax : 82-31-492-0446
Web : www.senko.co.kr